



OPERATING INSTRUCTIONS

for heat presses

Secabo TC 2, TC 5 and TC 7

Congratulations on purchasing a Secabo heat press!

Please read these operating instructions carefully so you can start production with your press without problems.

Reproduction of these operating instructions in any form requires the written approval of Nepata Vertrieb GmbH. We reserve all rights to change technical data and product features.

Nepata Vertrieb GmbH does not assume any liability for direct or indirect damage resulting from use of this product.



Table of contents

1	Brief overview	2
2	Safety Precautions	3
3	Scope of Delivery	4
4	Machine description	5
5	Controllers	6
6	Operation	7
7	Maintenance and cleaning	8
8	Recommended Times and Temperatures.....	9
9	Technical data	11



1 Brief overview

Secabo Secabo TC 2, TC 5 and TC 7 heat presses

Secabo Secabo TC 2, TC 5 and TC 7 heat presses enable you to carry out all common forms of heat transfers (flock foil, flex, sublimation, transfer, InkJet flex, chromablast, etc.) in a professional manner. The desired settings are easy to programme using the digital controllers for temperature and time. The pressure is regulated using a simple handwheel. When open, the presses offer a generous working space, allowing transfer items to be aligned quickly and accurately.

Secabo Secabo TC 2, TC 5 and TC 7 clam heat presses – a brief overview

- Professional heat presses for small to medium applications.
- Fast and simple selection of time and temperature, comparison of theoretical and actual values with digital display.
- Pressure can be varied using the height-adjustable heating plate.
- CE certificate, RoHS certificate, tested according to European safety standards.



2 Safety Precautions


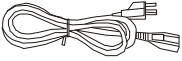

Please read these instructions and safety precautions carefully before using your press for the first time!

- Never reach into the heat press with your hands when it is connected to the power supply, particularly when it is switched on and heated up – danger of severe burns!
- Never open the housing or attempt to modify the machine yourself.
- Ensure that liquids and metal objects do not get into the inside of the heat press.
- Ensure that the power socket used is grounded. Note that it is only permissible to operate a heat press from a power socket protected by a ground fault protection switch.
- Disconnect the power plug if the machine is not to be used for a longer period of time.
- Never operate the heat press within the reach of children and never leave the machine unsupervised when switched on.
- Ensure that the machine is used only in dry rooms.


If you cannot observe one or more of the safety precautions above, or if you are not sure whether all points are satisfied, please contact our Technical Support Department.

3 Scope of Delivery

Before starting work, please check whether the following items are all present:


Item	Quantity	
Heat press	1	
230 V connection cable	1	
Operating instructions	1	

4 Machine description

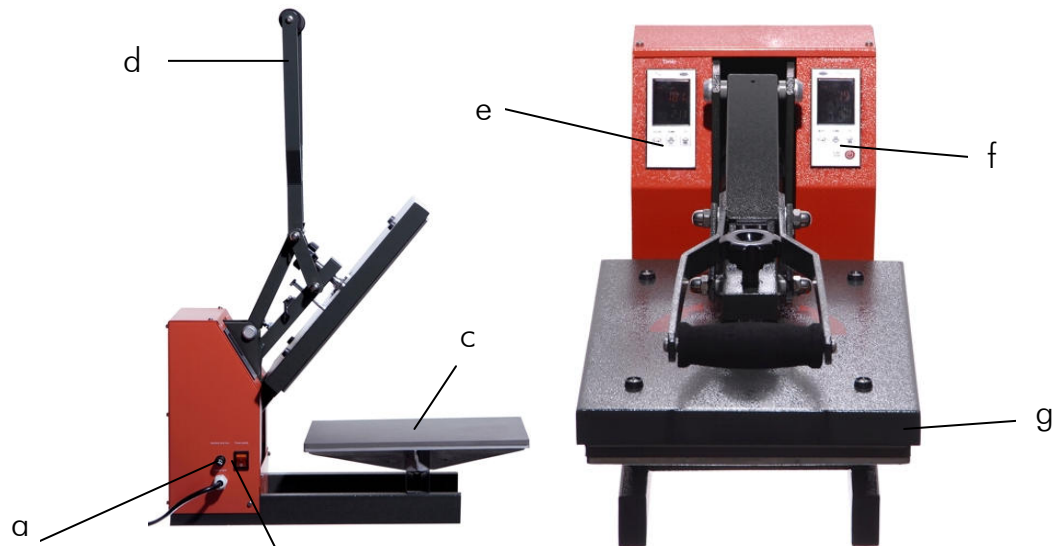

- a) Fuse
- b) Rocker switch
- c) Work surface
- d) Press lever
- e) Time controller
- f) Temperature controller
- g) Heating plate

5 Controllers

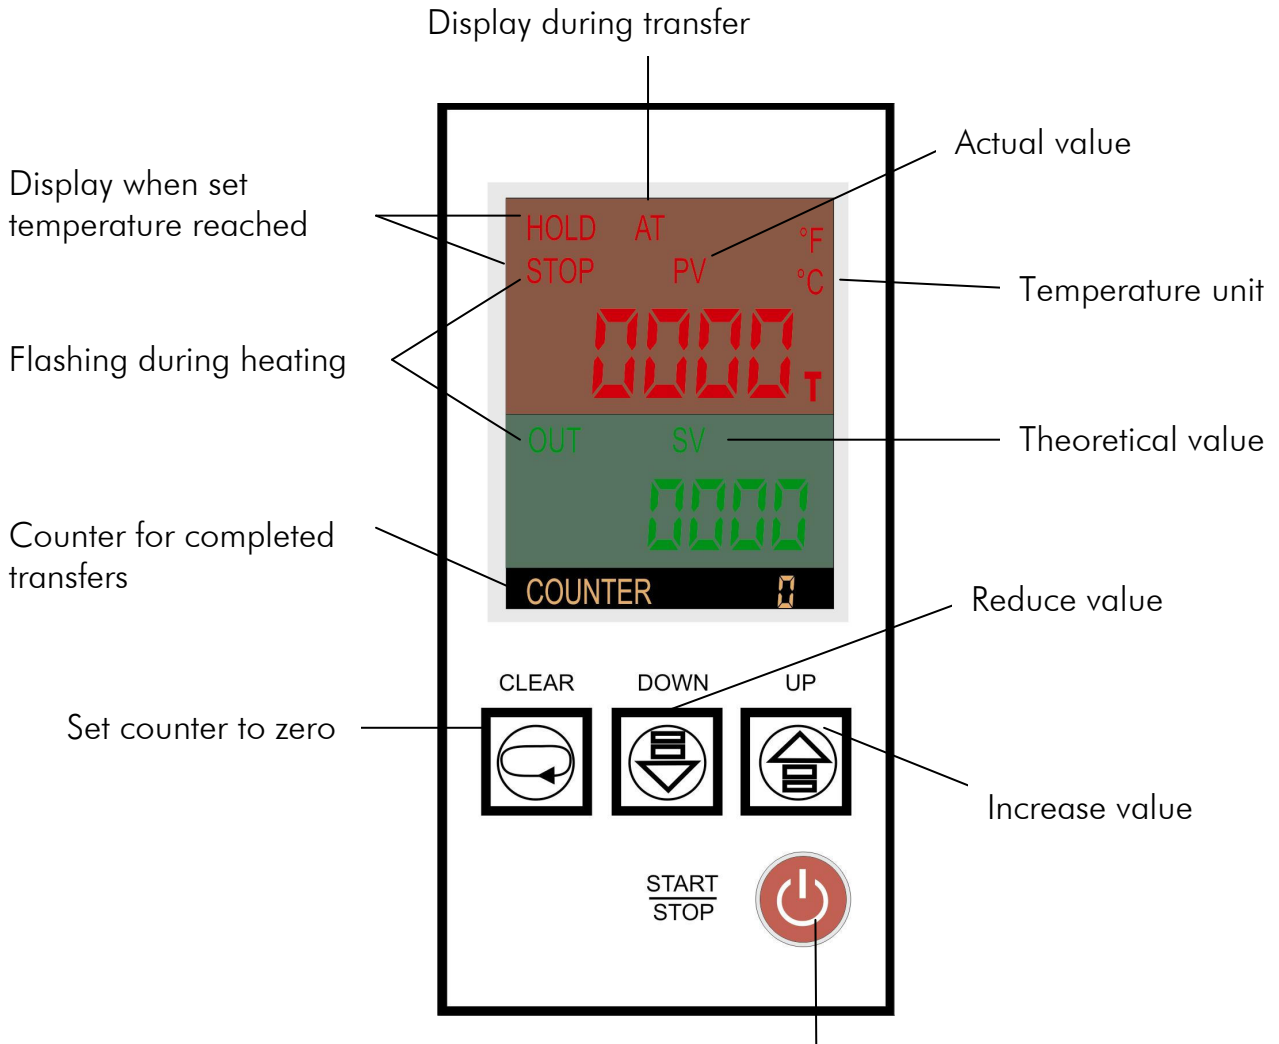

"START"

Press button to start heating

"STOP"

Press button again to stop heating



6 Operation

- Remove the magnetic strip on the press lever.
- Connect the heat press to a 230 V power socket using the connection cable supplied.
- Switch on the press with the red rocker switch.
- "STOP" is displayed on both controllers.
- Theoretical value "SV" and actual value "PV" are displayed. The theoretical value can now be set on the individual controllers.
- Use "UP" or "DOWN" to set the desired temperature on the temperature controller and to set the desired time on the time controller.
- Press the "START/STOP" button to start heating to the set temperature. "STOP" and "OUT" is displayed alternately on the temperature controller while the press is heating.
- Actual value PV rises to the set temperature.
- A signal is heard when the set temperature is reached. "STOP" and "HOLD" are displayed on the controller; the press is ready for operation.
- You can now make the first transfers. The timer starts running as soon as the press is closed with the press lever. "AT" is displayed on the time controller during the pressing process.
- After expiration of the set time a warning signal sounds.
- You can adjust the contact pressure by turning the large hand screw on the top of the press to increase or reduce the lever path. Turning it clockwise reduces the contact pressure, while turning it anticlockwise increases the pressure.
- The settings cannot be changed during pressing.
- Each time the pressing process is completed, the counter display increments by one after the set time has expired.
- You can reset the counter by pressing "CLEAR". "COT" is displayed on the time controller. Press "CLEAR" for longer than 2 seconds. If you press it for less than 2 seconds, the action will be cancelled.
- The "MODE" function button is only used for maintenance purposes and does not affect press operation.

Note: Please note that a certain time is required before the press cools down after it is switched off.



7 Maintenance and cleaning

Maintenance work should always be accomplished with the press switched off and cooled down. The plug must first be disconnected from the power socket. Consult Technical Support before carrying out any maintenance work.

Clean the press regularly with a soft cloth and mild household cleaner to remove adhesive residues etc. Never use scouring sponges, solvents or gasoline!



8 Recommended Times and Temperatures

These values are only guidelines; they can vary from material to material and should always be checked before pressing.

Material	Temperature	Pressure	Time
Flock film	170°C - 185°C	light-medium	25s
Flex film	160°C - 170°C	medium-high	25s
Sublimation flex	180°C - 195°C	medium-high	10s - 35s
Sublimation on ceramic mugs	200°C	medium-high	150s - 180s
Sublimation on tiles	200°C	high	120s - 480s <small>(depending on thickness of material)</small>
Sublimation on jigsaw puzzles	200°C	light-medium	25s
Sublimation mousepads	200°C	medium	20s - 40s
Sublimation on textiles	200°C	medium-high	30s - 50s
Sublimation on metal plates	200°C	high	10s - 50s <small>(depending on thickness of material)</small>




Important note: You should carry out your own tests with the transfer material and backing to be used before starting production. The values given above and the manufacturer's own figures are only intended as a guide. You should establish the washability and behaviour during transfer in your own tests.

The recommended values do not imply a guarantee. The user is responsible for determining and using the appropriate setting for his particular conditions.

Note for textile work: After pressing, allow textiles to cool down before removing any type of backing from the transfer material. The hot glue in the transfer material develops its adhesive force only in the cold state. If the adhesive does not stick in the cold state, it may have been pressed too cold or for too short a time.


9 Technical data

Heat press	Secabo TC 2
Type	Clam heat press
Work surface size	28 cm x 38 cm
Clam angle	0° - 50°
Max. temperature	260°C
Max. time setting	9999s
Max. contact pressure	250g/cm ²
Pressure adjustment	Height of heating plate adjusted using handwheel
Power supply	230 V / 50 Hz – 60 Hz AC, 1.75 kW
Ambient conditions	+ 5°C - +35°C / 30% - 70% humidity
Weight	30 kg
Dimensions (W x H x D)	29 cm x 36 cm x 68 cm
Scope of Delivery	Heat press, power cable, operating instructions

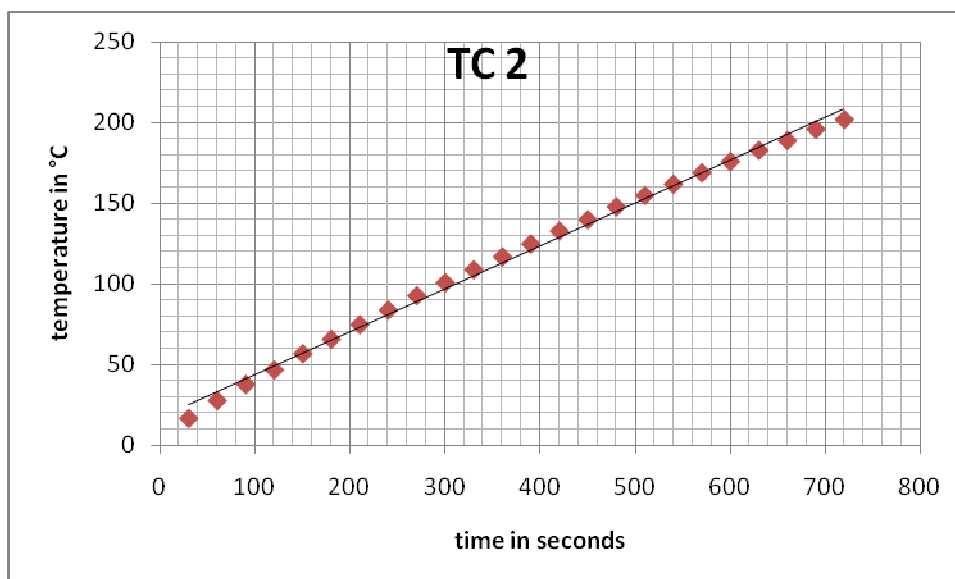



Heat press	Secabo TC 5
Type	Clam heat press
Work surface size	38 cm x 38 cm
Clam angle	0° - 50°
Max. temperature	260°C
Max. time setting	9999s
Max. contact pressure	250g/cm ²
Pressure adjustment	Height of heating plate adjusted using handwheel
Power supply	230 V / 50 Hz – 60 Hz AC, 2.20 kW
Ambient conditions	+ 5°C - +35°C / 30% - 70% humidity
Weight	34kg
Dimensions (W x H x D)	39 cm x 36 cm x 68 cm
Scope of Delivery	Heat press, power cable, operating instructions

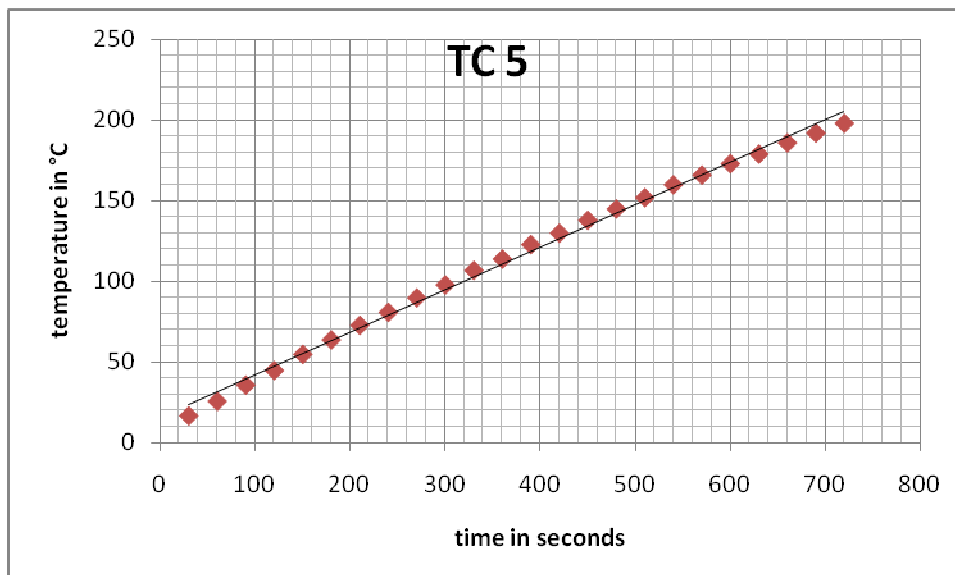



Heat press	Secabo TC 7
Type	Clam heat press
Work surface size	41cm x 51cm
Clam angle	0° - 50°
Max. temperature	260°C
Max. time setting	9999s
Max. contact pressure	250g/cm ²
Pressure adjustment	Height of heating plate adjusted using handwheel
Power supply	230 V / 50 Hz – 60 Hz AC, 2.20 kW
Ambient conditions	+ 5°C - +35°C / 30% - 70% humidity
Weight	39kg
Dimensions (W x H x D)	42cm x 36cm x 72cm
Scope of Delivery	Heat press, power cable, operating instructions



Nepata Vertrieb GmbH

www.secabo.com

Hochstatt 6-8

85283 Wolnzach

Germany